

## BANDSAW **FEED RATE** MONITOR

## **INSTRUCTIONS:**

ATTACH THE MORSE FEED RATE MONITOR TO THE SAW HEAD USING THE INTERNAL MAGNETS ON THE BOTTOM OF THE UNIT WHILE MAKING CERTAIN THE UNIT DOES NOT INTERFERE WITH THE MOVEMENT OF THE SAW OR THE MOVEMENT OF THE WORK PIECE.

PLACE THE HOOK ON THE SAW BASE DIRECTLY BENEATH THE FEED RATE GUAGE, THEN ATTACH THE CABLE FROM THE BOTTOM OF THE FFFD RATE GUAGE TO THE HOOK.

## **POWER ON:**

WITH BATTERY (SWITCH TO RIGHT) WITH AC POWER CORD (SWITCH TO LEFT)

## **POWER OFF:**

WHEN FINISHED (SWITCH TO CENTER)

THE FEED RATE IS DISPLAYED IN BOTH "inches/minute" AND "mm/minute".







